





**SRAM E-tap**  
PULLEY Wheel Kit  
Installation instruction

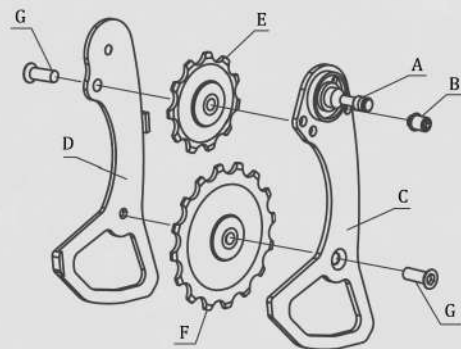

**Location of parts**

- |                    |                      |
|--------------------|----------------------|
| A Cage pivot       | E Upper pulley wheel |
| B Cage stop screw  | F Lower pulley wheel |
| C Back cage plate  | G Pulley bolt        |
| D Front cage plate |                      |


**STEP 1**

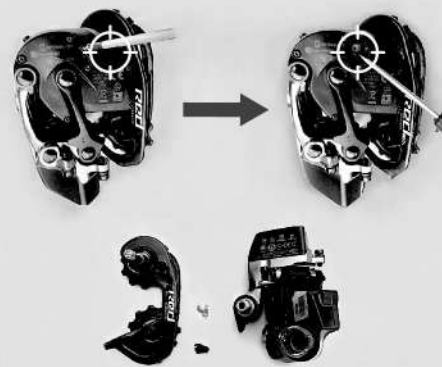

**Remove original pulley wheels**

1. Use a screwdriver to remove the screw cover, from ⊕ mark in above figure.
2. Remove the fixing bolt from ⊕ mark in above figure.
3. Remove the Pulley wheel set.

**STEP 2**

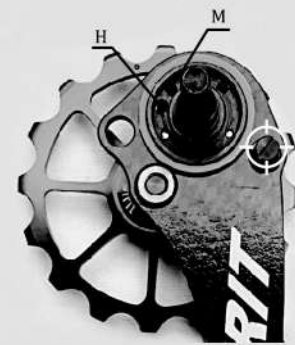


**Remove the cage stop screw**

Rotate it counterclockwise and remove the cage stop screw.

### STEP 3



#### Install Pulley wheel set

1. Mount the tension spring, Tighten the pivot bolt.
2. Put the L-shape fixing plate on the  mark.




Secure the bolt from  mark in above figure.

### STEP 4



#### Install the cage stop screw

Rotate the pulley cage counter as the  mark shows.  
Use screw drive to mount the bolt to a max torque less then 0.3Nm and carefully release the pulley cage.

### STEP 5



#### Tighten Pulley wheel bolt

Use a 2.5 mm Allen key to tighten both pulley wheel bolts to a max torque less then 1 Nm.